

Push-to-Open Drawers

User Instructions



Please retain these instructions for future reference

The mechanism embedded in the drawer runners (which are mounted to each side of the drawer box) enables the drawer to open or close when 'pushed'. A closed drawer will be in a 'locked' position, and both sides must be 'unlocked' correctly to operate the drawer.



To operate Push-to-open drawers correctly 'push' gently on **both** sides of the drawer front. This will ensure the mechanism is engaged on both drawer runners, and the drawer will open evenly. (You can also properly engage both runners by pushing in the centre of the drawer).

WARNING: Pressing on one side only will cause only one drawer mechanism to engage, which will result in one side of the drawer being 'locked' while the other is 'unlocked' and the drawer will sit lopsided, or open unevenly. **If this occurs, see over the page for instructions to 'reset' your drawer. Repeated misuse may damage the runners.**

TO OPEN:

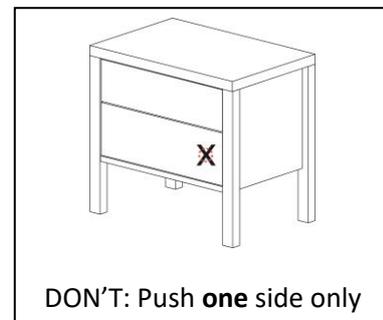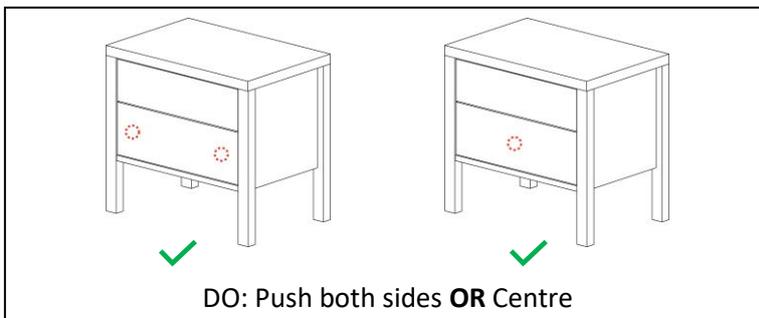

TO CLOSE:

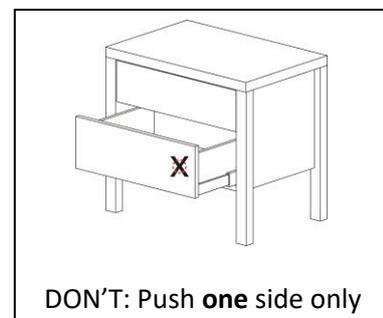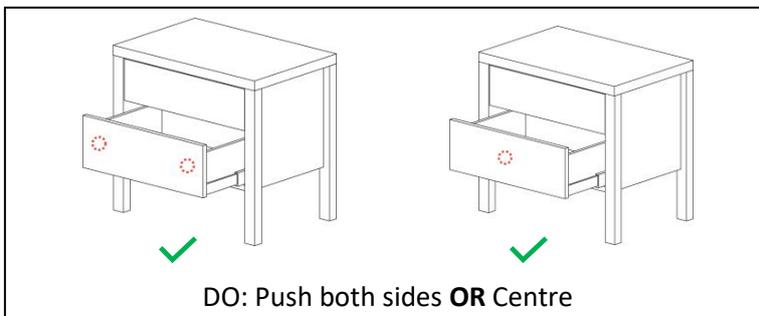

Push-to-Open Drawers

User Instructions

Please retain these instructions for future reference

If your drawer runners become misaligned – one runner locked, and one runner unlocked - you will need to reset them. To reset your runners, 'push' the locked (closed) side to unlock this runner. You should then be able to gently pull your drawer all the way open. Close your drawer by pushing evenly on **both** sides of the drawer front, ensuring both sides 'lock' into the closed position.

TO RESET:

